

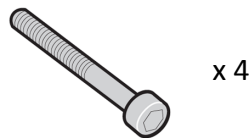
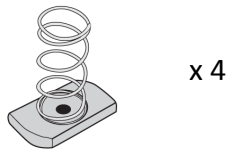
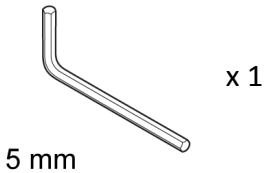
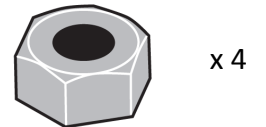
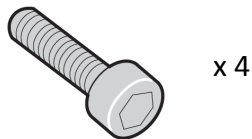
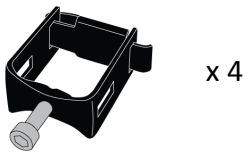
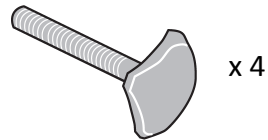
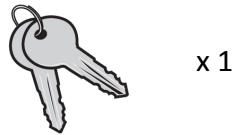



GB Fitting Instruction for Accessory

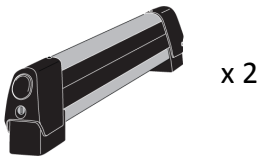

First Time Installation

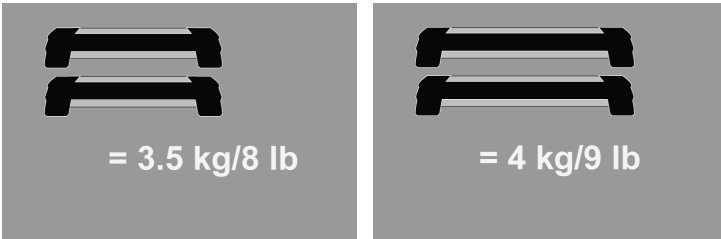

- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.

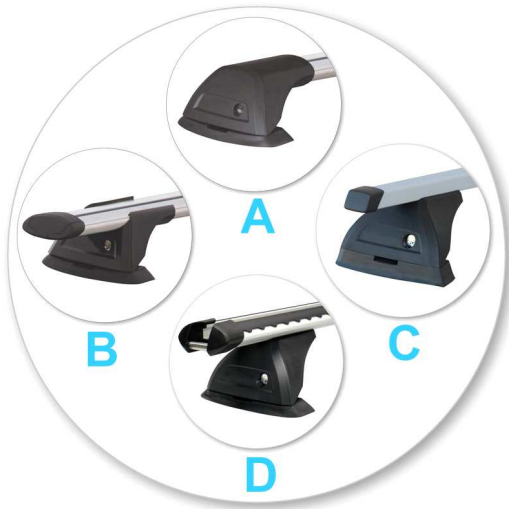


- This kit fits type A, B, C and D.

All Crossbars:




- Unlock holder with keys.
- Press large button on leg to release top arm.

For type A and B crossbars only.

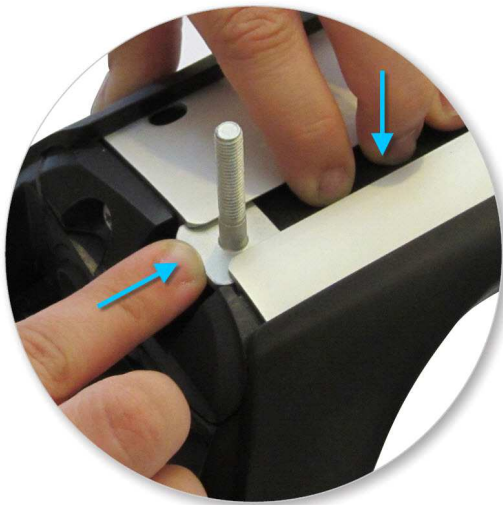

- Push down rubber infill.
- Slide square nut bolt along channel.
- Repeat for both holders.
- PR3064 / PR3094: Position 46.5cm (18 1/2") apart.
- PR3066 / PR3096: Position 67cm (26 3/8") apart.

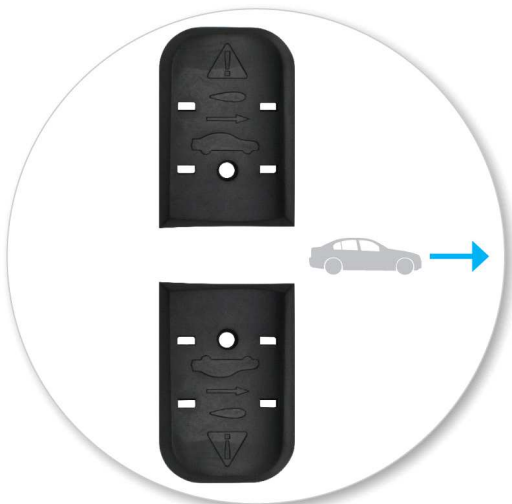

- Determine which side the holder should be opened from.
- Ensure pads are pointing forward.




- Place the holder over the screw.
- Ensure the screw protrudes through the hole.
- Check position of holders.
- NOTE: To provide more access to attachment points, bottom rubber cushion can slide along arm. Return rubber to centre once attachment finalised.



- Tighten red knob.
- Repeat for all four positions.

For type C and D crossbars only.

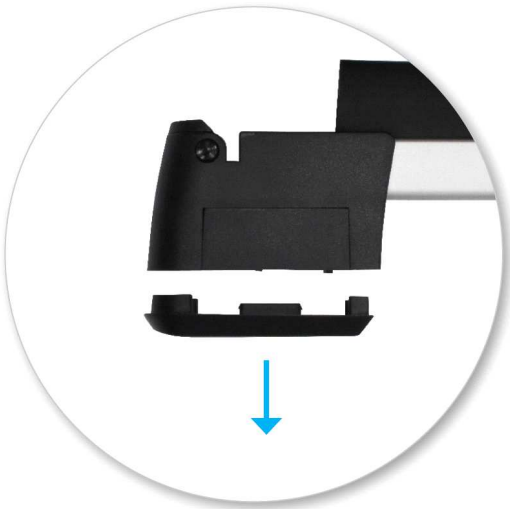

- Remove pad.
- Store items away in a safe place.

For type C crossbars only.



- Assemble as shown.
- NOTE: Use shorter capscrews.



- Thread the assembly through the hole onto the nut underneath.
- NOTE: To provide more access to attachment points, bottom rubber cushion can slide along arm. Return rubber to centre once attachment finalised.



- Undo the mounting clamp screw (but do not remove it).
- Unclip the tab so it hangs free.



- Determine which side the holder should be opened from.
- Hold the mounting clamp by the screw and feed it down through each end of the holder.




- Position holder on the crossbar.
- Fold the tab under the crossbar and into the slot on the mounting clamp.
- Repeat for all four positions.



- Check position of holders.
- Use the hex key provided to tighten the screw on the mounting clamp.
- Repeat for all four positions.

For type D and Tradesman crossbars only.

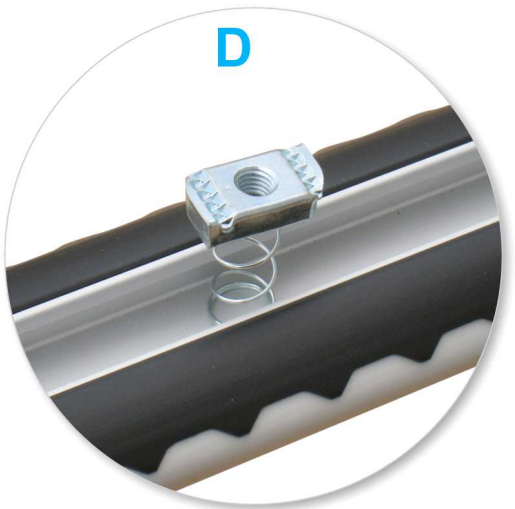


- Place spring nut into crossbar channel.
- Position where you want the accessory to be.



- Push down and twist spring nut to lock into place.




- PR3064 / PR3094: Position 46.5cm (18 1/2") apart.
- PR3066 / PR3096: Position 67cm (26 3/8") apart.
- Repeat on other crossbar.

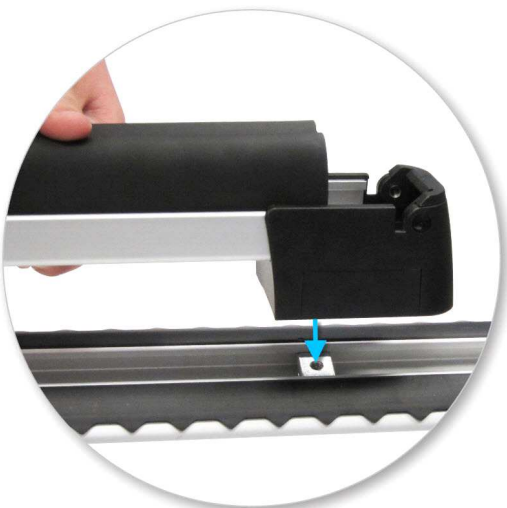


- Determine which side the holder should be opened from.
- Position holder on the crossbar.
- Align holes in foot of holder over spring nuts.



- NOTE: To provide more access to attachment points, bottom rubber cushion can slide along arm. Return rubber to centre once attachment finalised.

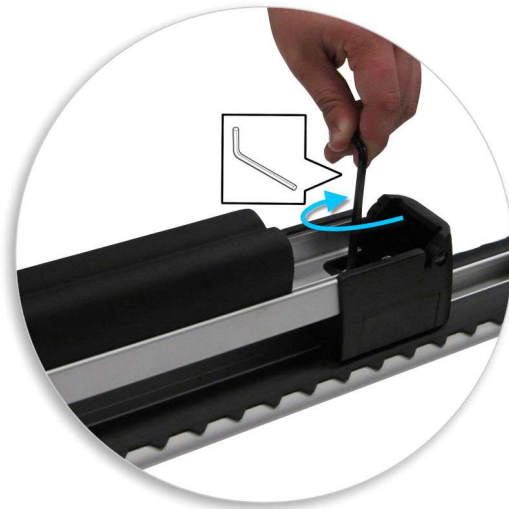

- NOTE: Use longer capscrews.
- Attach capscrew with the Hex Key. Do not fully tighten.
- Repeat at other end.
- Tighten all screws.
- Repeat on other crossbar.

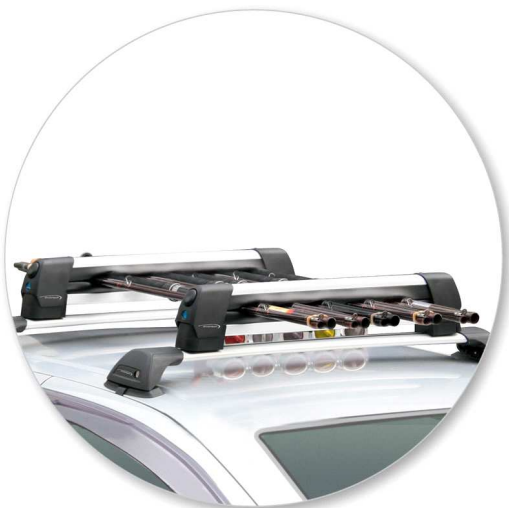

- To secure load, lower top arm until catch engages. Holder should be locked during transport.



- NOTE: Ensure that skis or snowboards that are positioned upside down in holder have sufficient roof clearance for their bindings.
- Objects with pointed ends (e.g. ski poles) should be carried with the pointed ends to the rear of the vehicle.
- NOTE: Ensure that any reels have sufficient roof clearance.

Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm (27 1/2") apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some glass/panoramic roofs and radio antennae may not be able to be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.

- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Check and replace worn out or defective parts.
- Keep the product clean and maintained.
- Never drive into a car wash with the roof rack system fitted.
- Lubricate locks and adjusting screws at regular intervals.
- Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.

-
- Hubco Automotive Ltd
P. O. Box 11017
Christchurch
NEW ZEALAND

www.whispbar.com
www.whispbar.com.au
www.whispbar.co.nz
www.whispbar.co.uk
www.whispbar.co.za
www.whispbar.eu
www.whispbar.ca
